


TODDLER BED (DAY BED) CONVERSION INSTRUCTIONS (Long Beach Static) LBS-DAYKIT


Required tools and parts

(Quantity)


(1)-Left and (1)- Right Leg

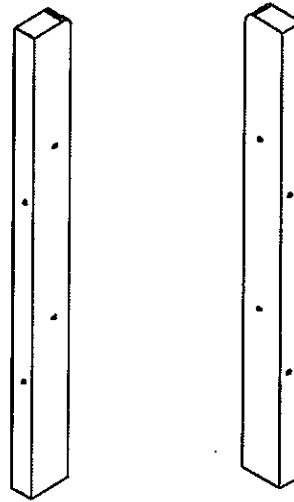


(1)-Toddler Guard Rail

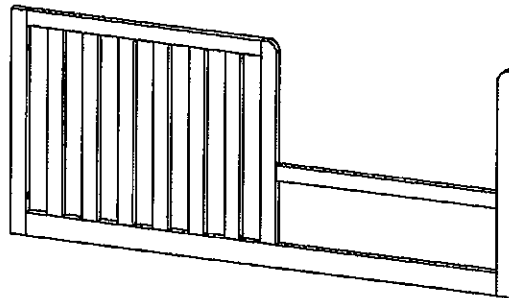

(4)-60mm bolts

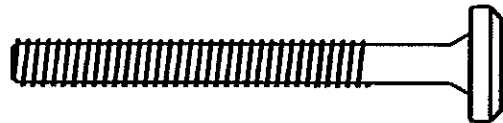

(1)-Hex Wrench
(Provided with crib
package)

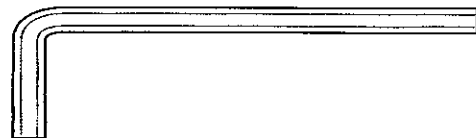


(4)-65mm bolts
(Use the bolts from
crib footboard)




Step#1

Remove Foot end of Crib. At this point simply remove the four, 65 mm bolts from the crib sides, separating the footboard from the ends (wings). The footboard then should be stored away for future use as a full double bed. Put mattress support at lowest level.

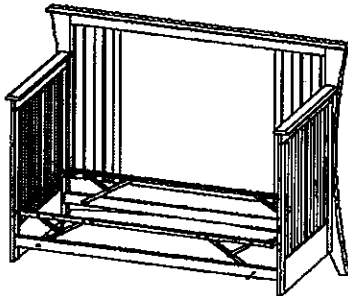


Step# 2

Attach Left and right legs to the crib sides using the four (65mm) bolts removed from the footboard.

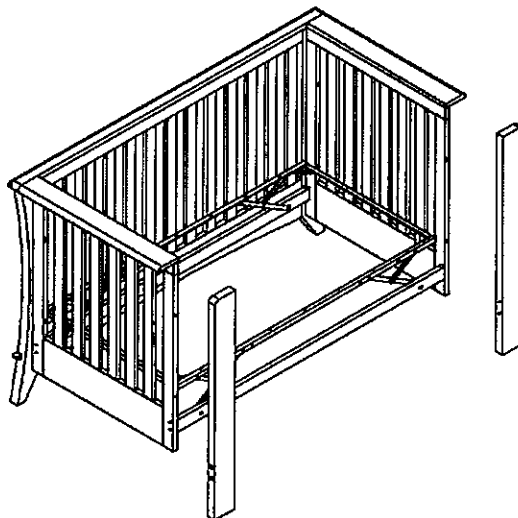

Step#3

Attach Toddler guard rail to the legs, using the four (60mm) bolts provided.

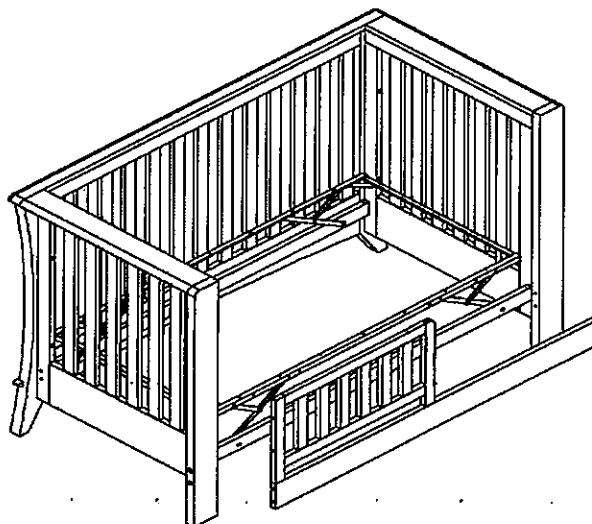

Safe Storage and Cleaning of Crib

When cleaning the surface of this crib, use a damp cloth and gently wipe surface area. If crib requires disinfecting, use a non-toxic or child-friendly cleanser. When not in use, this crib should be safely stored in a dry and mild area.

Additional Instructions

- The mattress intended for use on the bed shall be a full-size crib mattress having minimum dimensions of 57 5/8 in. in length and 27 1/4 in. in width and a thickness of 4 in..**
- The minimum age shall be no less than 15 months and the maximum weight shall not be greater than 50 lb..**